THE INNOVATIVE WARP SIZING BLENDS

AVCO-SIZE





AVCO-SIZE

- Easy swelling, save cooking time & energy
- Produces higher weaving efficiencies
- Flexible sizing film, very high binding capacity and individual threads are easily separated during the critical stages of drying, therefore the high speed of sizing machine is possible
- Manufactured to a consistent chemical and physical specification conforming to BS, EN, ISO standard
- Less broken sizes, dust, lint formation in weaving room.
- Less consumption comparing with conventional sizes: according to the construction, reduced from 20 – 30%.
- O No need add wax in sizing recipe in most cases
- Easy desizing, there are some kinds of AVCO-Size only removed by washing with hot water





PRODUCT RECOMMENDATION

PRODUCT	IONICITY	FIBRES	APPLICATION
AVCO-SIZE 250	Weak anionic	Co, Pe/Co	Designed for sizing Co, TC yarns. Easy removed by hot water and enzyme.
AVCO-SIZE BHF	Nonionic	Co, viscose	Recommended for DENIM and viscose fabric. Easy removed only by hot water. Resistant to high humidity. Does not increase viscosity of starch when used in blends.
AVCO-SIZE DNC	Anionic	Со	Suitable for towels and cotton fabric. Easy removed by hot water and enzyme.
AVCO-SIZE DNF	Anionic	Co, viscose	Recommended for DENIM. Easy removed by hot water and enzyme.
AVCO-SIZE DNL	Anionic	Со	Suitable for towels and cotton fabric. Easy removed by hot water and enzyme.
AVCO-SIZE N	Nonionic	Co, viscose and blends	Designed for Co, T/C yarns. Easy removed only by hot water. Resistant to high humidity. Does not increase viscosity of starch when used in blends.





PRODUCT RECOMMENDATION


		111111	
PRODUCT	IONICITY	FIBRES	APPLICATION
AVCO-SIZE SPA-50	Anionic	Pe/Co, Pe	Designed for sizing T/C, Polyester yarns. Easy removed by hot water and enzyme.
AVCO-SIZE HWD01	Anionic	Pe/Co, Pe	Designed for sizing T/C, Polyester yarns. Easy removed by hot water and enzyme.





PROPERTIES OF AVCO-SIZE COMPARING WITH CONVENTIONAL SIZES

I. TENSILE STRENGTH OF SIZING FILM

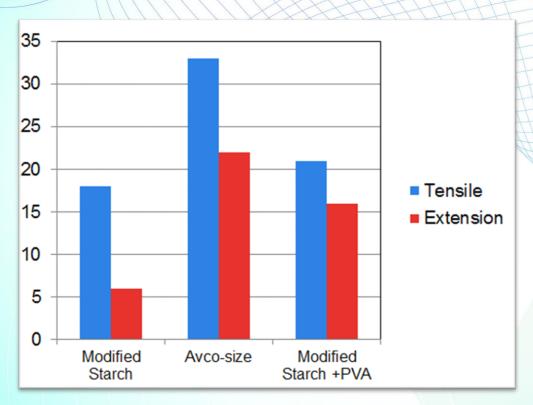


AVCO-SIZE film is stronger and tougher than modified Starch and even the blend of modified Starch and PVA





PROPERTIES OF AVCO-SIZE COMPARING WITH CONVENTIONAL SIZES

II. FOAMING PROPERTIES

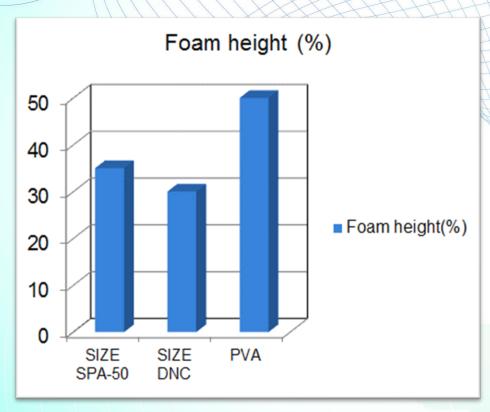


Typical result in 70/30 starch/PVA blend & AVCO-SIZE





PROPERTIES OF AVCO-SIZE COMPARING WITH CONVENTIONAL SIZES

III. STABILITY OF SIZING SOLUTION

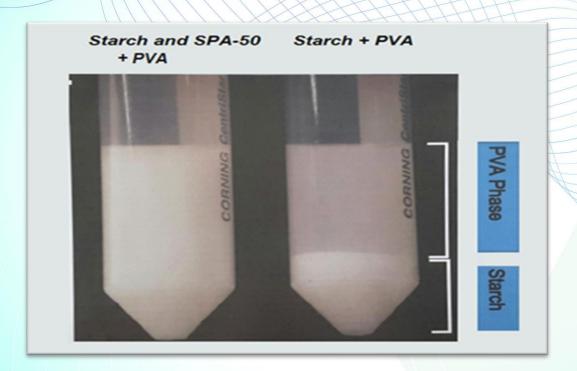

Blend of Starch and PVA are susceptible to separate in two phases. Addition of AVCO-SIZE SPA-50 eliminates this problem.





TRIAL REPORT

Trial date

Company

Subject Desizing woven fabric sized with AVCO-SIZE

	. — —		
		$\cap \cap \cap$	
	ı / ⊨		
I. J	14L	$\cup \cup \cup$	KING

CHEMICALS CONCENTRATION (%)

TEST 1 TEST 2

AVCO-SIZE DNL 7.5

PVA + Starch 10

Process Cooking at 90°C x 25' Cooking at 90°C x 25'

Viscosity (FORD CUP#4) 12 sec 15 sec

II. YARN CONSTRUCTION

Yarn Count Ne 20

Total Ends 4400

Weaving Construction 65 x 60 / CD20 x CD20

III. WEAVING EFFICIENCY OF AVCO-SIZE TRIAL

Length of loom (meter) 3500

Efficiency (%) 95





TRIAL REPORT

Trial date

Company

Subject

Desizing woven fabric sized with AVCO-SIZE

IV. SIZE COOKING			
CHEMICALS	CONCENTRATION (%)		
	TEST 1	TEST 2	
AVCO-BIOLIT OSA 50	3		
AVCO-ZIM UND (α-amilase)	4		
Process	Padding → Batching for 8 hrs → Hot wash (2 times) → Cold wash	Hot wash (2 times) → Cold wash	

V. DESIZING RESULT

Test 1 Test 2

TEGEWA (Violet scale) 5

Weaving construction 65 x 60 / CD20 x CD20

Solution after hot wash

TEGEWA result of desized fabric

